
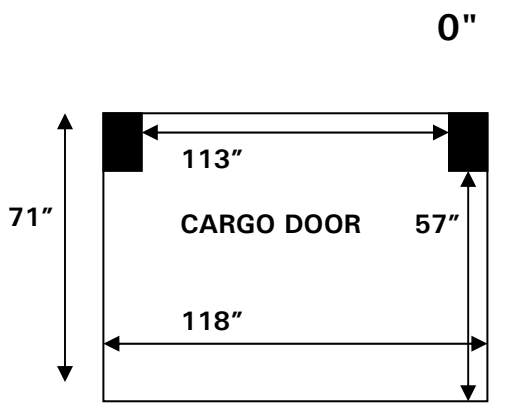



CONVAIR 5800

SEE CARGO AIRCRAFT
SUMMARY FOR MAX WEIGHTS

Cargo Loading Equipment Box: 31"

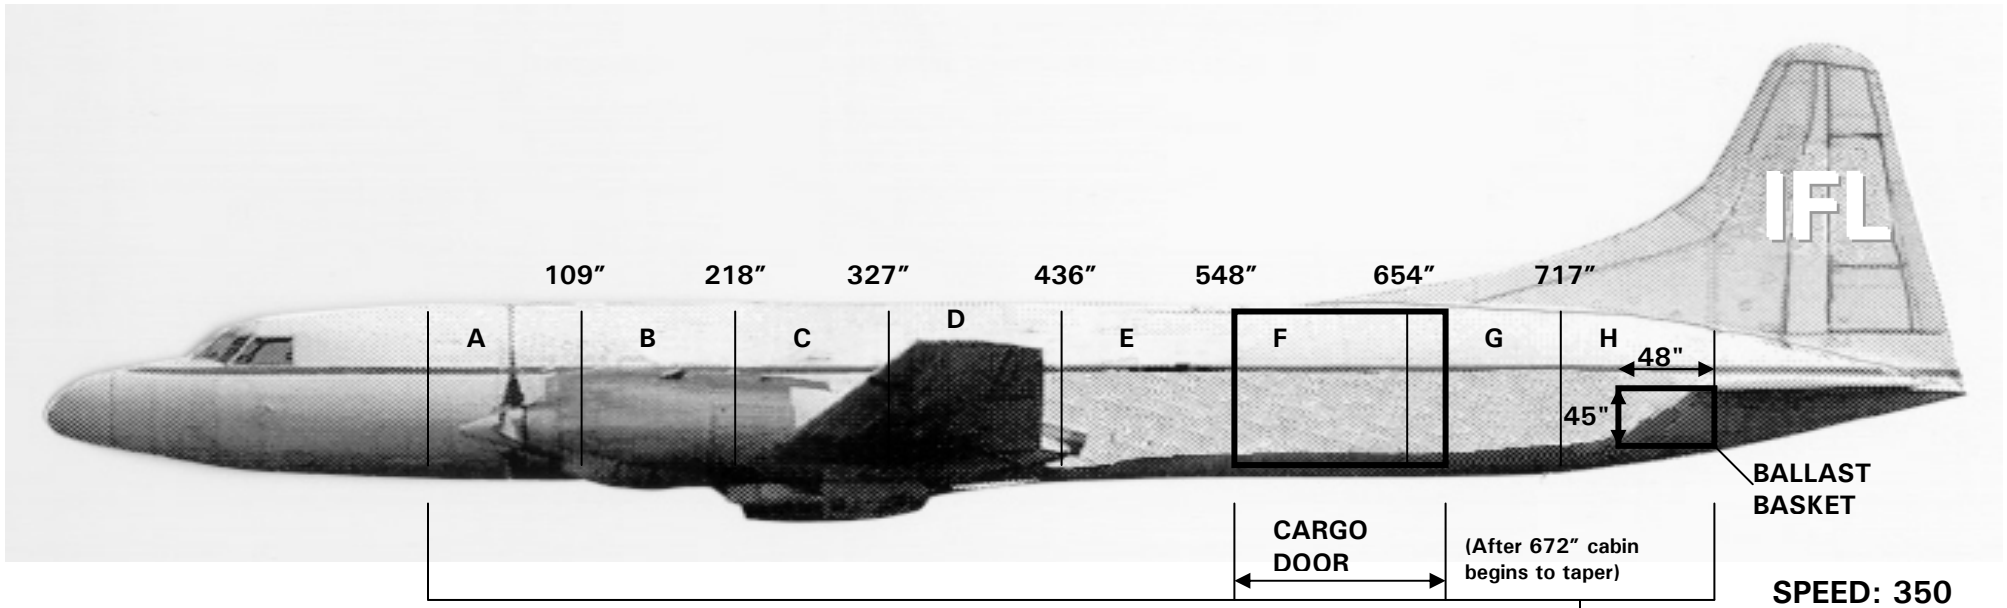

NOTE: With Guard closed: max width 89"

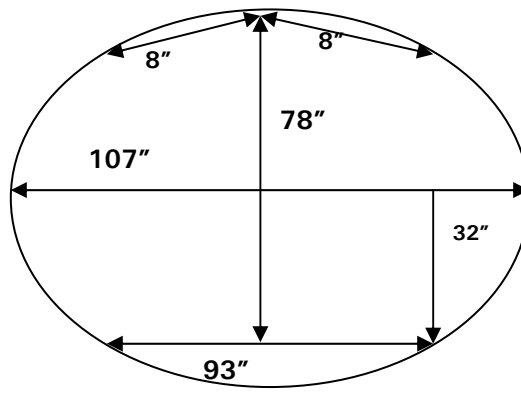

CABIN WIDTH AND HEIGHT

COMPARTMENTS

A thru F = 109"

G = 62.5"

H = 68.5"

VERY LIGHT LOAD

*Please refer to FLOOR
LOADING FORMULA and
LOADING CHART

0" 545" 663" 785"

CV-580/5800 LOADING CHART AT DOOR

(except N131FL)

The following dimensions are maximums per skid/box.

L	X	W	X	H
113	X	49	X	71
113	X	50	X	70
113	X	54	X	69
113	X	57	X	68
113	X	60	X	67
113	X	62	X	66
113	X	64	X	65
113	X	68	X	64
113	X	70.5	X	62
113	X	73	X	60
113	X	76	X	58
118	X	86	X	57
118	X	87	X	56
118	X	88	X	55
118	X	90	X	54
118	X	92	X	53
118	X	93	X	52

NOTE: MAXIMUM CABIN WIDTH IN FRONT OF DOOR WITH THE DOOR CLOSED IS 89" BECAUSE OF THE DOOR GUARD.

CABIN SIZE (FORWARD OF DOOR)

MAXIMUM DIMENSIONS FOR ANGULAR LOAD				
L	X	W	X	H
300	X	24	X	52
260	X	30	X	52
240	X	36	X	52
220	X	42	X	52
200	X	48	X	52
185	X	54	X	52
170	X	60	X	52

W	X	H
44	X	73.5
46	X	73
48	X	72
50	X	71.5
52	X	71
54	X	70.5
56	X	70
58	X	69
62	X	68
66	X	66
70	X	65
72	X	64
74	X	63
78	X	61
80	X	60
82	X	59
84	X	58
85	X	57.5

ALL SIZES BELOW THIS POINT ARE THE SAME AS ABOVE